

Mercedes W210


Body:

Years.: 1995 - 2001 ;

V: All except - 4wd

VIN:-

Type: 13.1169

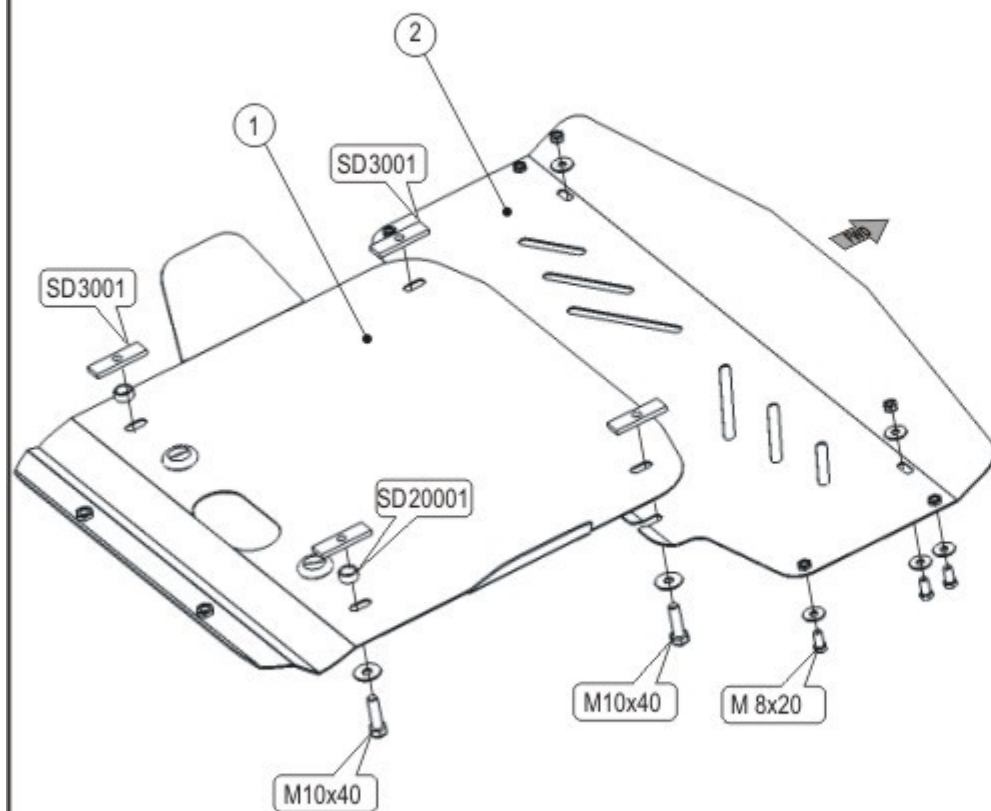

1. Remove OE plastic duster.
2. Disassemble the skid plate to component parts.
3. Fix threaded inserts to crossbars' apertures.
4. Fix element "1" to mounted threaded inserts. Do not tighten bolts yet.
5. Fix element "2" together with element "1" in rear and to the radiator's beam in front
6. Tighten all screw joints.
7. Mount lateral plastic wings.

