

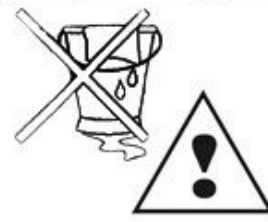
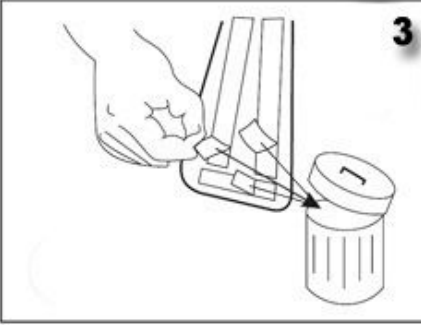
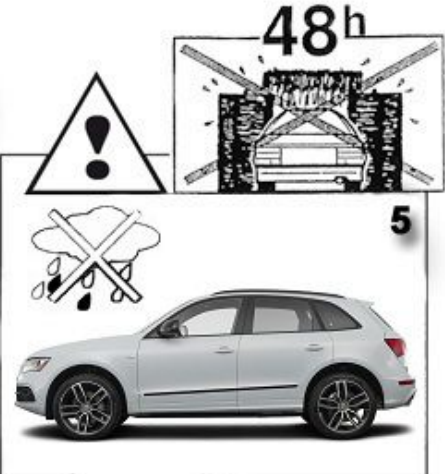


Audi Q5 2008-2016
Subaru Forester 2013-2018
VW Golf VII 2012-2020
VW Tiguan 2007-2015
VW e-Golf 2014->
F-11

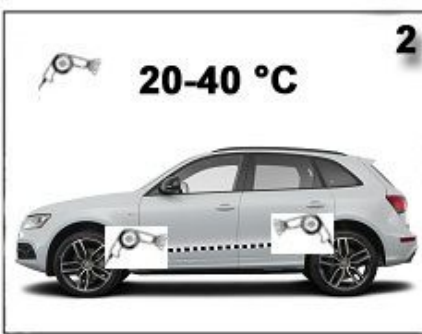

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

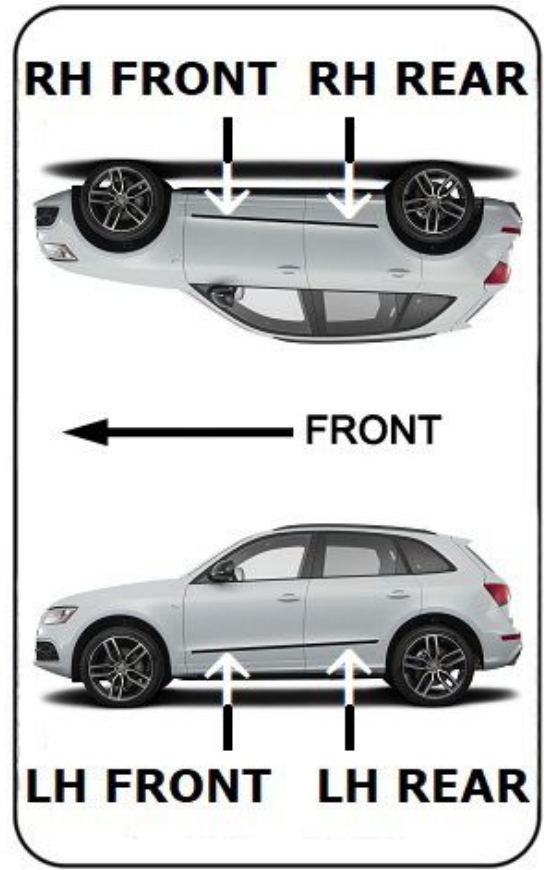