



Peugeot 2008 2013-2019  
 Skoda Octavia 2020->  
 Suzuki SX4 S-Cross 2013->  
 Toyota Yaris 2014-2020  
 Volvo V60 2010-2018  
 F-20

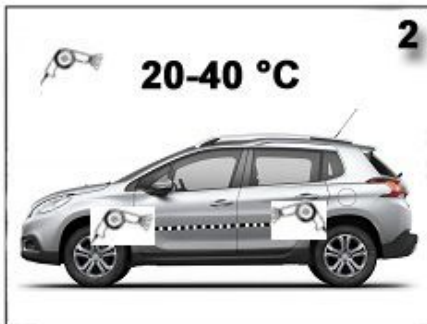

ledere cm goed aandrukken !!  
 Press very carefully every cm !!  
 Sehr fest andrücken jeden cm !!

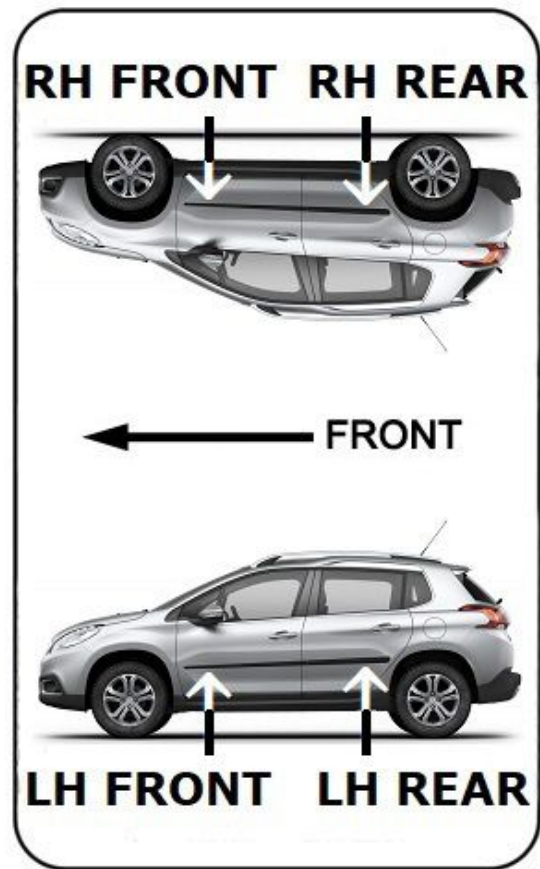