
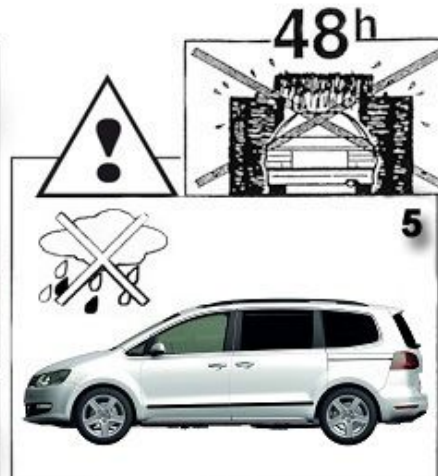
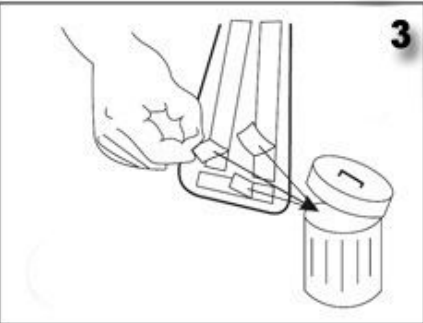
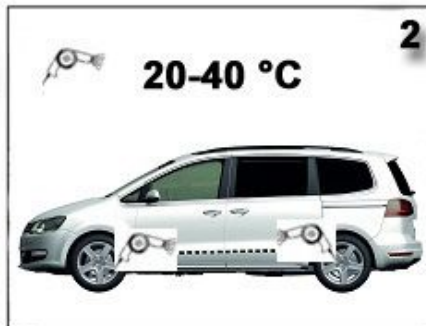


Volkswagen Sharan II 2010 →

PU Side Mouldings

F-37

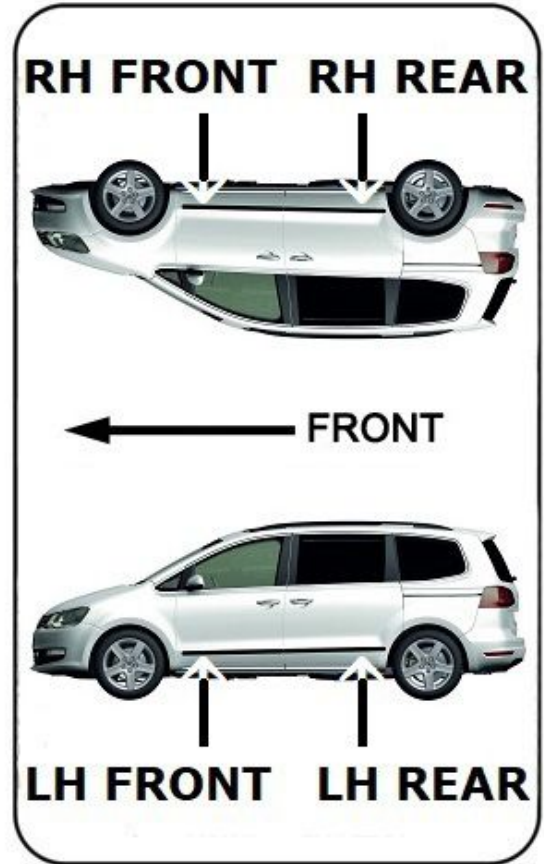

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

