

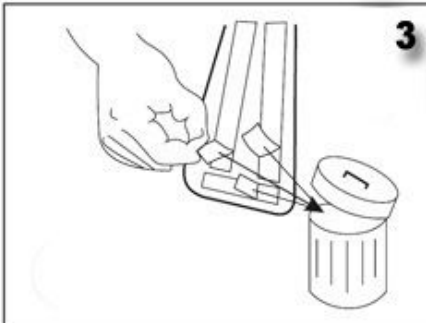
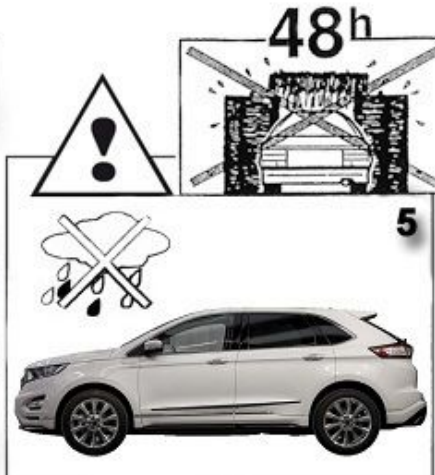


Ford Edge 2014→ PU Side Mouldings F-8

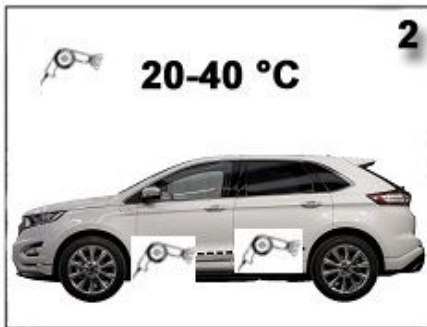

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

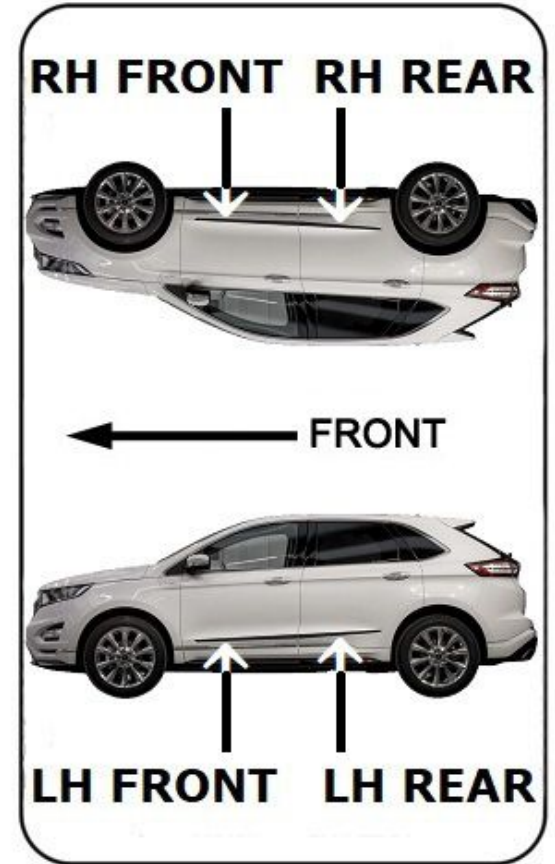