

1

MG4 2022->


Installation instructions *frunk*

Contents of installation kit:

- 4 x ball studs M8x14
- 4 x locking nuts M8
- 4 x washer M8

Tool requirement:

- slotted screwdriver
- open-end wrench WS 12
- open-end wrench WS 13

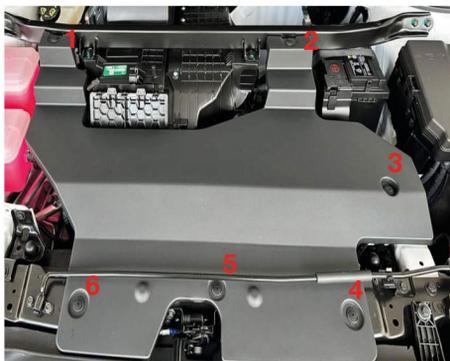

pic 1

Monteringsanvisning Frunk

Innhold:

- 4x Kulehoder M8x14
- 4x Låsemutterer M8
- 4x Skiver M8

Nødvendig verktøy:

- Flatt skrujern
- Fastnøkkel 12
- Fastnøkkel 13

1. Remove engine cover:

- Open and remove the plastic expansion screws 1-6 with a slotted screwdriver.

pic 1-3



pic 2



pic 3

1. Ta av motordekselet

- Skru ut plast skruene 1-6 med flatt skrujern.

pic 1-3

2

- Remove engine cover.

pic 4




pic 4

- Ta vekk motordekselet

pic 4

2. Position the ball stud:

- Position the locking nut from below at the existing circular opening A. pic 5
- Screw the M8 ball bolt hand-tight with a washer and an M8 locking nut. pic 6
- Secure the M8 locking nut with an SW13 open-end wrench and tighten the ball bolt with an SW12 open-end wrench. pic 7
- (max. 8 Nm torque)
- Proceed in the same way for ball bolts B, C and D.

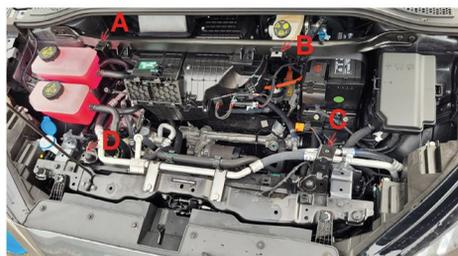

pic 5

2. Plasser kulehodene:

- Sett inn kulehodet med skive og låsemutter (A) pic 5
- Stram disse med en fastnøkkel 13 og 12 (max. 8Nm Moment) pic 6
- Gjenta samme stegene for B, C og D.



pic 6



pic 7

pic 7

3

3. Put on *frunk* :

- Put the box into the engine compartment. pic 10
- Position the front vibration dampers on the ball studs C and D and press them in as far as they go. pic 8
- Proceed in the same way for rear vibration dampers A and B. pic 9



pic 8



pic 9

3. Sett inn frunken:

- Sett frunken inn i motorrommet. pic 10
- Plasser de fremmre vibrasjonsdamerene på kulehodene C og D. Press disse på plass. pic 8
- Gjenta samme steg for A og B. pic 9

4. Ensure a firm fit - done!.

Note:

- Do not load over the *frunk*'s top edge.
- Maximum load 10 kg



pic 10

4. Se over alle fester og punkter
Ferdig!

Obs:

- Last ikke over toppen av frunken
- Max last: 10kg