

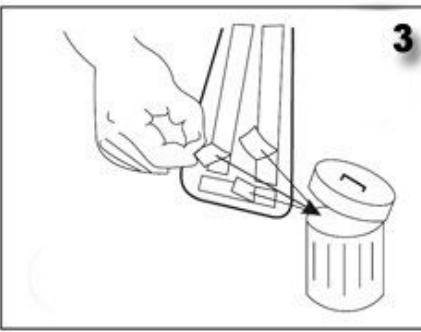
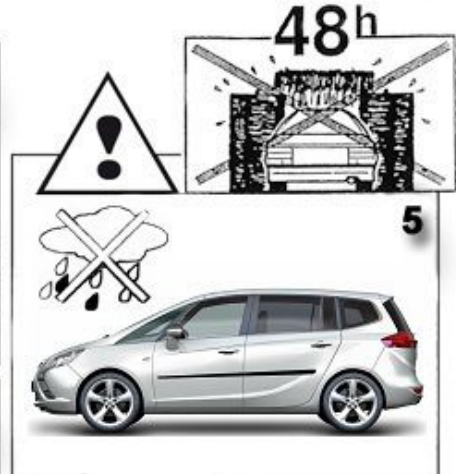
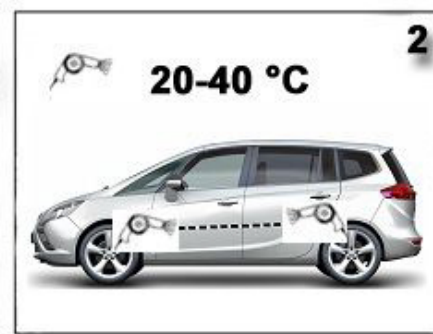


Opel Zafira Tourer/C 2012→ PU Side Mouldings F-14/16

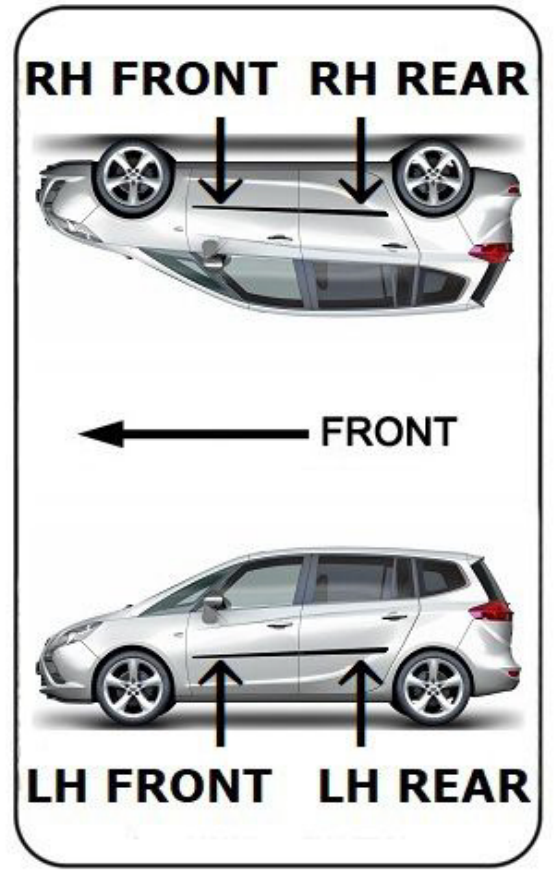

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

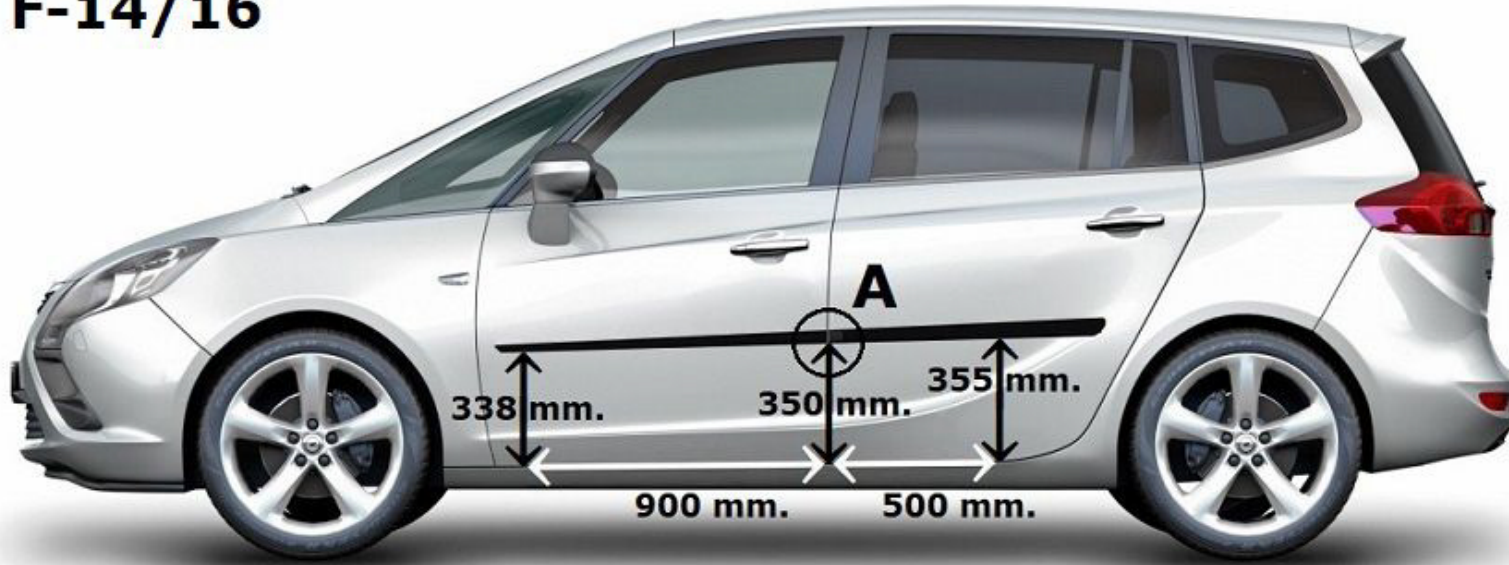