

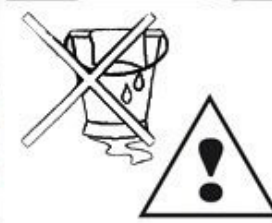
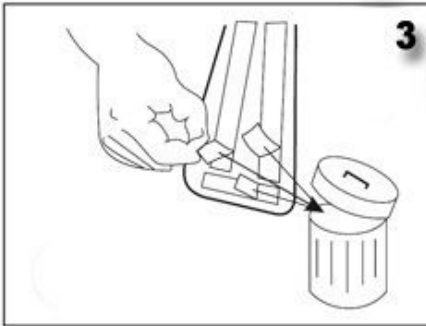
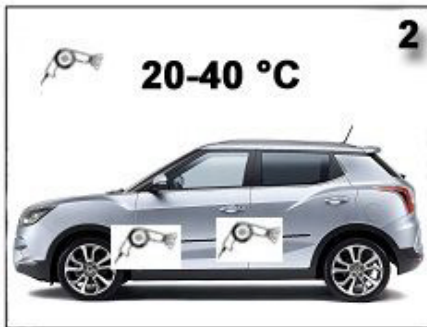


# SsangYong Tivoli 2016 → PU Side Mouldings F-27

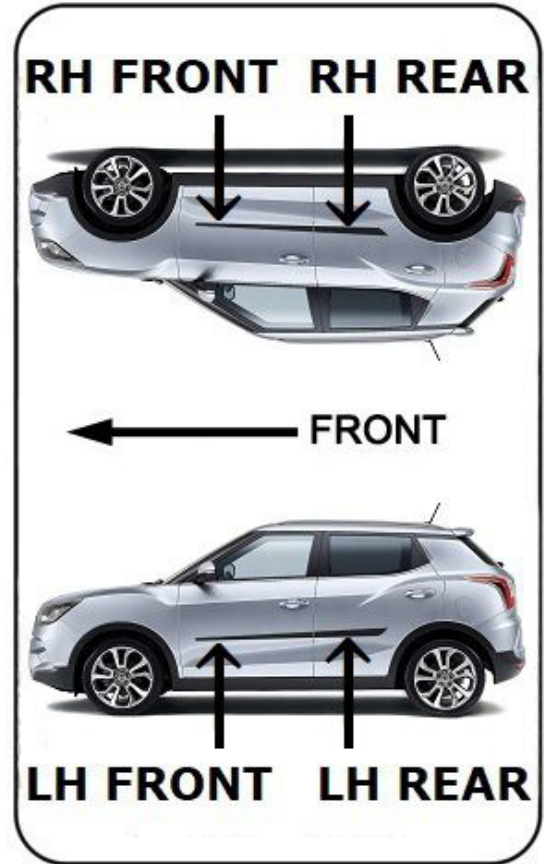

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

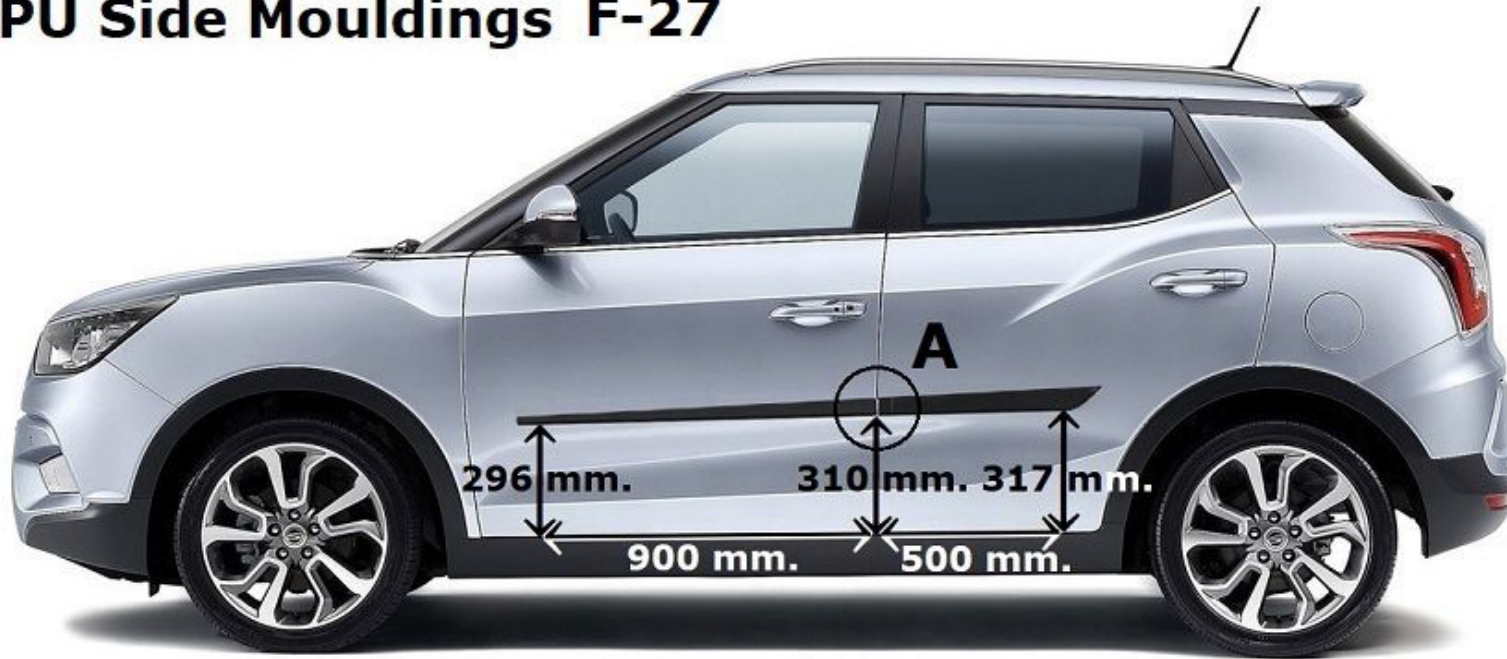