
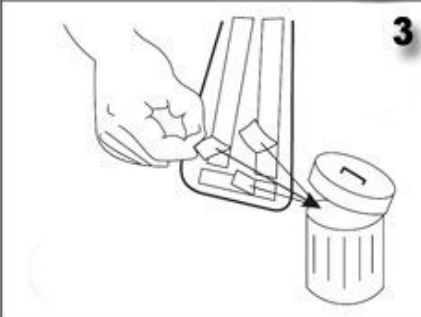
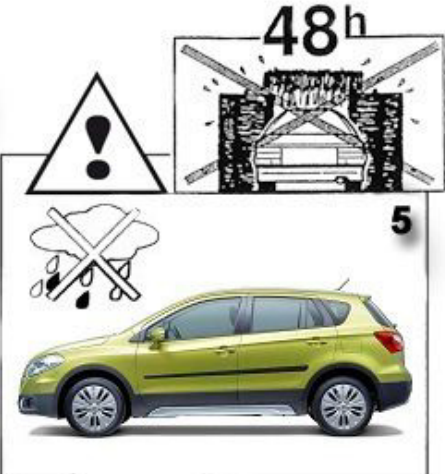
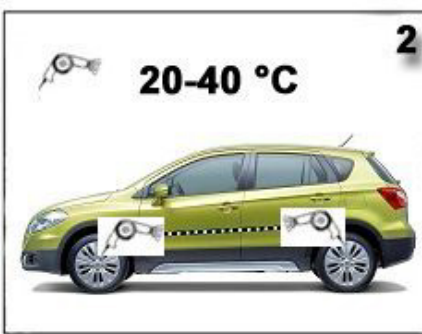
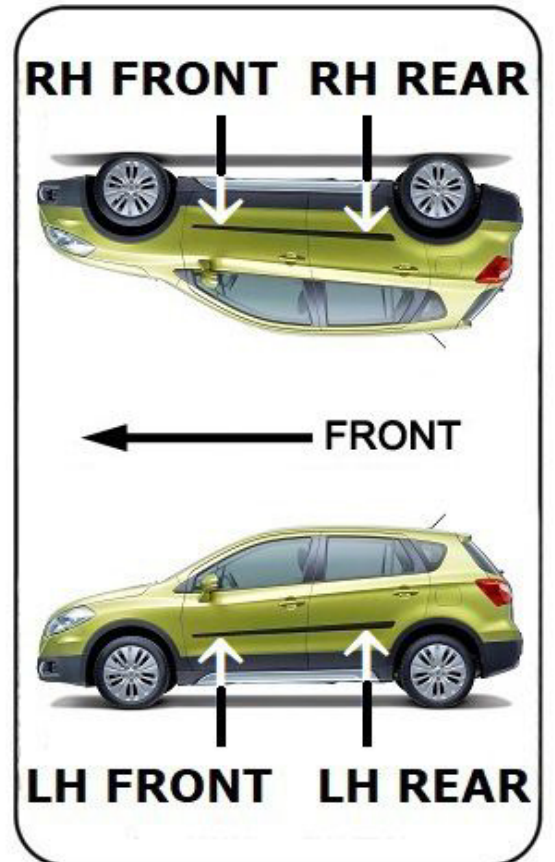


Suzuki SX4 II S-Cross 2013→

PU Side Mouldings

F-20

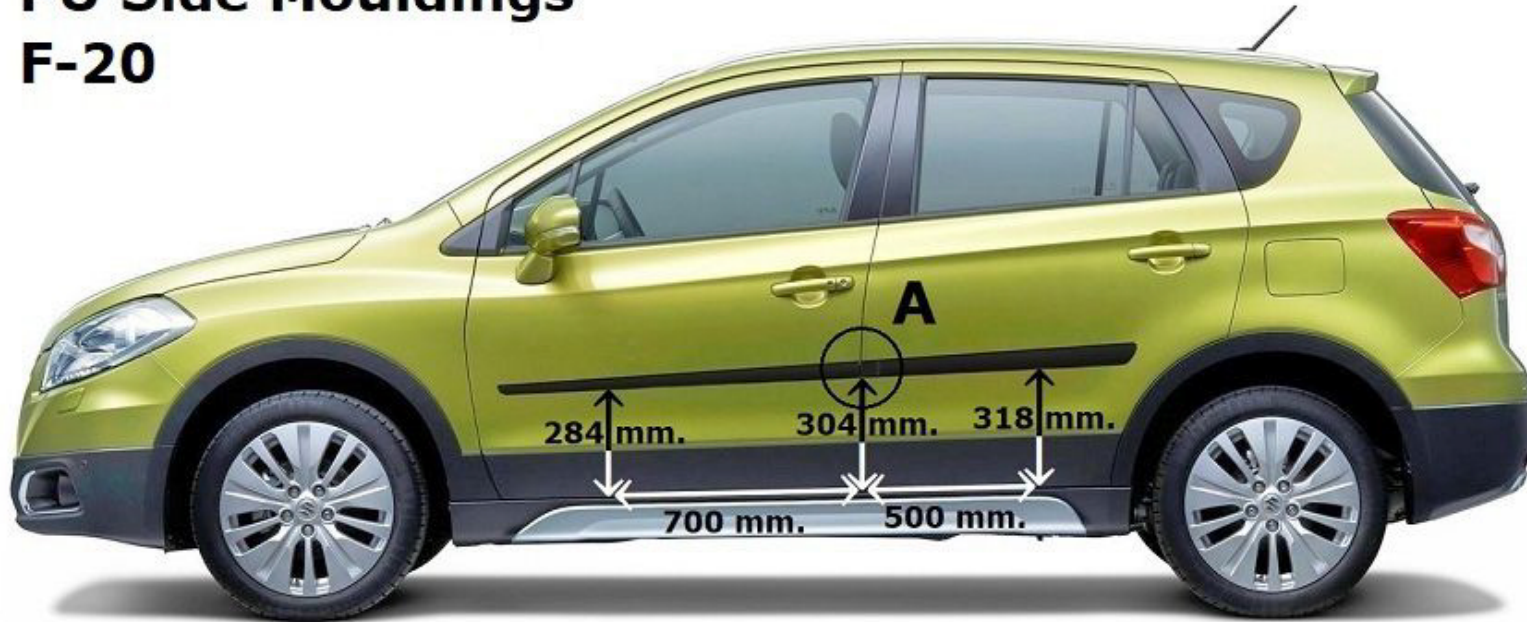

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

