


# WeatherTech®

## No-Drill MudFlaps

### Installation Instructions

### Monteringsanvisning

	What You Need	Hva trenger man ?
	Trim Clip Remover* Flat Blade Screwdriver*  *Not included	Klipstang (anbefalt) Flat skrutrekker  *ikke inkludert
	48MF550 Parts Kit x2: (4) Plastic Fasteners  48MF568 Parts Kit: (2) Metal U-Clips	Monteringsett  *inkludert

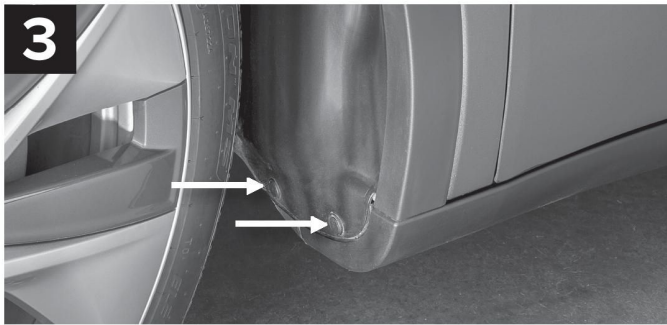

Locate the (2) two factory plastic fasteners at the inner fender as indicated.

**Se etter 2 stk originale klipps i innerskjermen**



Using a trim clip remover, remove the (2) two factory plastic fasteners at the inner fender. Pry the head up and then the base out of the fender. They will not be reused.

**Bruk klipstang eller flat skrutrekker for ta disse ut**



Using the MudFlap marked "LH", place it up to the fender and engage the tab behind the fender lip. Then slide it into place where it aligns with the corresponding fastener holes and is tight against the inner fender.

**Sett på skvettlapp (venstre side)  
og pass på slik at toppen av skvettlappen  
hefter i hjulbuenkanten**



Take (2) two supplied plastic fasteners and install them by inserting them through the MudFlap holes and inner fender, then fully depress the head to lock them in place.

**Sett inn 2 stk medfulgte klipps og sett disse  
inn de originale hullene**



Install (1) one supplied U-Clip by placing it where it clamps around the MudFlap and fender lip, then push it into place with a flat blade screwdriver.

**Sett inn 1 stk U-klipp som følger med i topp av skvettlapp som hekstes bak hjulbueanten**



Install the passenger side MudFlap marked "RH," repeating Steps 3-7.

**Sett på skvettlappen på høyre side og følg de samme stegene som på motsatt side pkt. 3-7**



**Congratulations!**

Your new WeatherTech® No-Drill MudFlaps have been installed!

**Gratulerer!**

**Dine nye skvettlapper er nå ferdig monterte**