


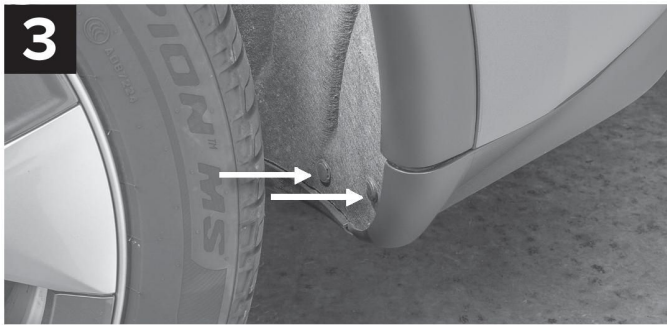
WeatherTech®

No-Drill MudFlaps

Installation Instructions

Monteringsanvisning

	What You Need	Hva trenger man ?
	Ratchet and Socket Set* Trim Clip Remover* Flat Blade Screwdriver* *Not included	Pipesett / fastnøkler Klipstang (anbefalt) Flat skrutrekker *ikke inkludert
	48MF550 Parts Kit x2: (4) Plastic Fasteners 48MF568 Parts Kit: (2) Metal U-Clips	Monteringsett *inkludert



Locate the (2) two factory plastic fasteners at the inner fender as indicated.

Se etter 2 stk originale klipps i innerskjermen



Using a trim clip remover, remove the (2) two factory plastic fasteners at the inner fender. Pry the head up and then the base out of the fender. They will not be reused.

Bruk klipstang eller flat skrutrekker for ta disse ut



Locate the (1) one factory screw on the underside of the fender as indicated. Using a ratchet and appropriate socket, remove this screw. It will be reused.

Se etter en skrue på undersiden av bakfangeren og ta denne skruen ut



Using the MudFlap marked "LH," place it up to the fender and align with the corresponding holes. Then, loosely reinstall the screw from Step 5.

Sett på skvettlapper (venstre side) og skru tilbake den originale skruen inn igjen (obs! ikke stram)



Take (2) two supplied plastic fasteners and install them by inserting through the MudFlap holes and inner fender, then fully depress the head to lock them in place.

Sett inn 2 stk medfulgte klipps og sett disse inn de originale hullene



Install (1) one supplied U-Clip by placing it where it clamps around the MudFlap and fender lip, then push it into place with a flat blade screwdriver.

Sett inn 1 stk U-klipps som følger med i topp av skvettlapp som hekstes bak hjulbuekannten



Fully tighten the screw on the underside of the fender.

Stram den originale skruen på undersiden



Install the passenger side MudFlap marked "RH," repeating Steps 3-9.

Sett på skvettlappen på høyre side og følg de samme stegene som på motsatt side pkt. 3-9



Congratulations!

Your new WeatherTech® No-Drill MudFlaps have been installed!

Gratulerer!

Dine nye skvettlapper er nå ferdig monterte