


## REAR DEFLECTOR FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

### MULTI FIT

(P/N RD228/229/230)

1. Assemble the 2 sets of stainless steel brackets as shown below.

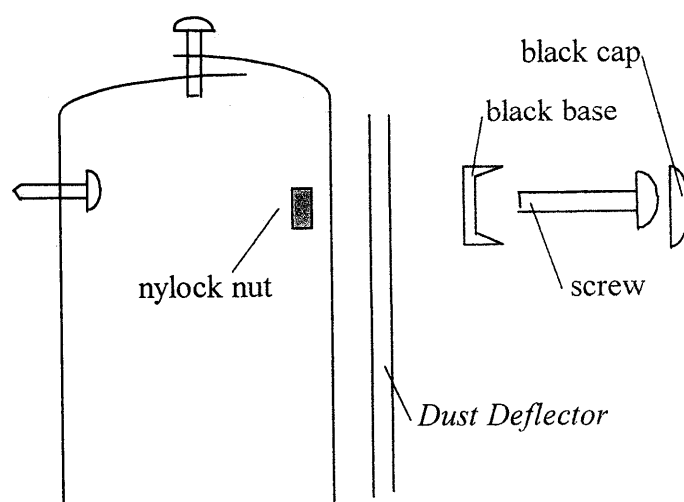

2. Trial fit the *Rear Deflector* to the vehicle in the desired position. Ensure that the *Rear Deflector* is level, and mark the location of brackets fixing to both the *Rear Deflector* and the vehicle.
3. Remove *Rear Deflector* from vehicle.
4. Drill the *Rear Deflector* holes using a 5.2mm drill bit. Use a blunt drill. Do not use excessive force when drilling *Rear Deflector*.
5. Drill fastening holes in the vehicle bodywork to enable secure fitment of the stainless steel brackets. Use a 2.8mm drill bit. Take care not to drill any further than necessary. Do not attempt to drill near any glass window area.
6. Assemble the stainless steel brackets to vehicle and *Rear Deflector*. Tighten all components in position.

To clean: Wash in soapy water. Solvents or cleaners not formulated for acrylic plastic may scratch, glaze. A non-abrasive automotive wax may be used for protection.

**Made in New Zealand**