

1

### VW e-Up 2013-2022

#### Installation instructions *frunk*

##### Contents of installation kit:

- 2 x spacer bolts M6x55
- 2 x locking nuts M6
- angle with ball pin
- pan head screw M6x12
- slot nut M6


##### Tool requirement:

- open-end wrench SW 10
- allen key SW 4
- allen key SW 4


1. The *frunk* is set upon three mounting points A, B and C. *pic 1*



pic 1

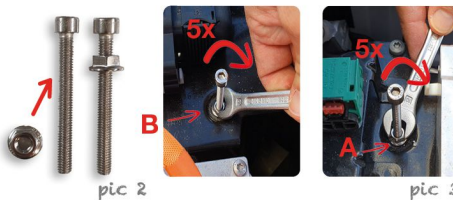


pic 2

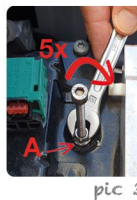

pic 3

2. Mounting points A and B:

- Screw on lock nuts and spacer bolts. *pic 2*
- Screw both spacer bolts into the threaded bushes A and B with 5 turns. *pic 3*
- Tighten lock nuts in order to fix. *pic 3*  
(max. 5 Nm torque)

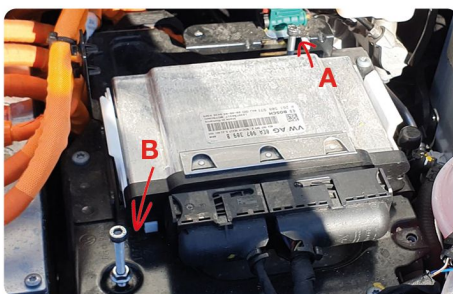

pic 4

#### Montering av Frunk

##### Innhold:

- 2x Spacerskruer M6x55
- 2x Låsemutterer M6
- Brakett med kulehode
- Skruve M6x12
- Mutterbrakett

##### Verktøy som kreves:

- Fastnøkkel 10
- Unbrakonøkkel 4
- 

1. Frunken monteres på tre punkter A, B og C. *pic 1*

pic 1

2. Monteringsplasser A og B

- Skru på spacerskruen på låsemutterene. *pic 2*
- Skru disse inn på markert plass A og B 5 vendinger. *pic 3*
- Stram låsekrue slik at skruen settes fast. *pic 3*  
(max. 5Nm Moment)

pic 3

2


3. Mounting point C:

- Insert slot nut in angle connector. *pic 5*



pic 5

- Place the angle connector with the positioned slot nut on the mounting plate. *pic 6*

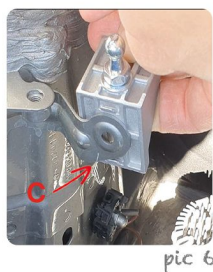

pic 6

- To fix the angle connector, screw the pan head screw M6x12 to the slot nut. *pic 7*  
(max. 5 Nm torque)



pic 7

3. Monteringsplass C:

- Sett inn mutterbraketten i braketten med kulehode. *pic 5*

- Plasser braketten med kulehodet på vist plass. *pic 6*

pic 6

- Sett inn skruve og stram braketten. *pic 7*  
(max. 5Nm Moment)

pic 7

3

4. Put on *frunk* :

- Thread the box under the technical engine compartment edge.
- Position the vibration damper C on attachment point C and press on.
- Proceed in the same way for vibration dampers A and B. *pic 8*



*pic 8*

4. Montering av frunk:

- Sett frunken inn i motorrommet
- Plasser vibrasjonsdemper på festeplass (C) og press den på.
- Gjenta samme steg på festeplass A og B. *pic 8*

*pic 8*

5. Ensure a firm fit - done! *pic 9*



*pic 9*

5. Se over monteringen. Ferdig! *pic 9*

*pic 9*

Note:

- Do not load over the *frunk's* top edge.
- Maximum load 8 kg

Obs:

- Last ikke over toppen av frunken
- Max last: 8kg