


# Volkswagen Passat B7 kombi 2010→14

## PU Side Mouldings

### F-16/20

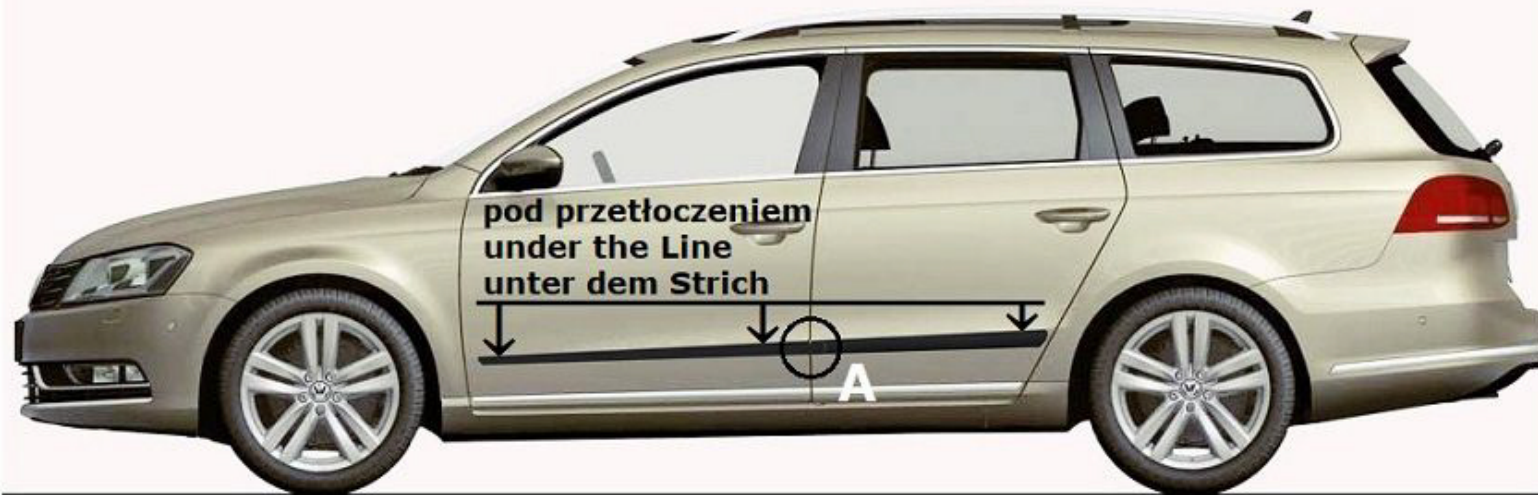

RH FRONT RH REAR



← FRONT



LH FRONT LH REAR

1 Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C

2



48h



5




3



4



ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

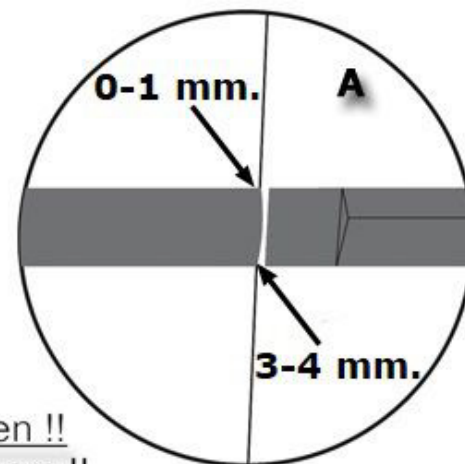

**Gytis Autek<sup>AS</sup>**