


Volkswagen Golf VII 2012→

PU Side Mouldings

F-11

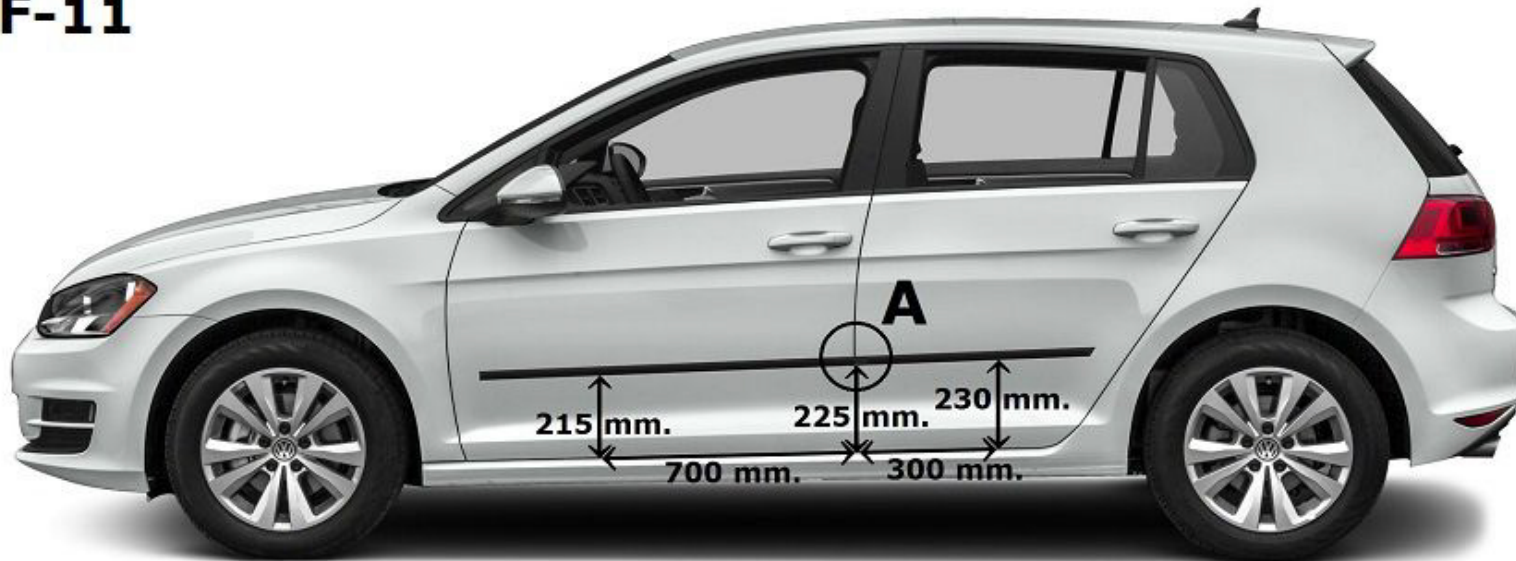



RH FRONT RH REAR




← FRONT



LH FRONT LH REAR

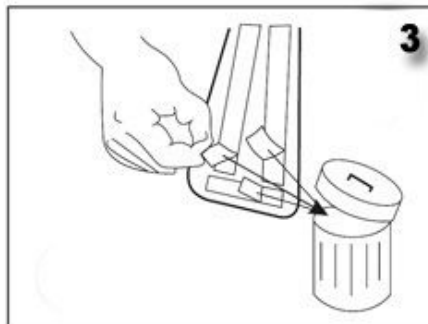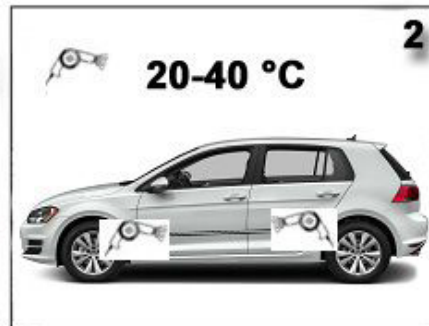

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

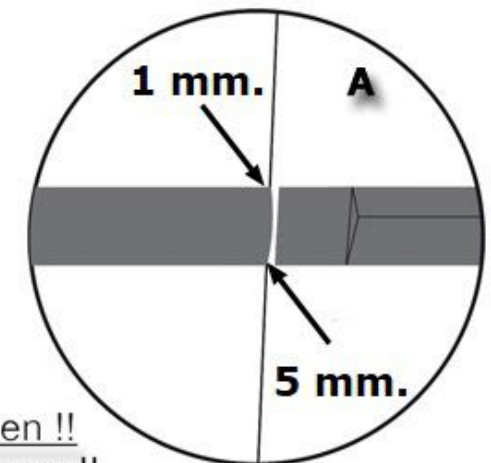

Gytis Autek^{AS}