

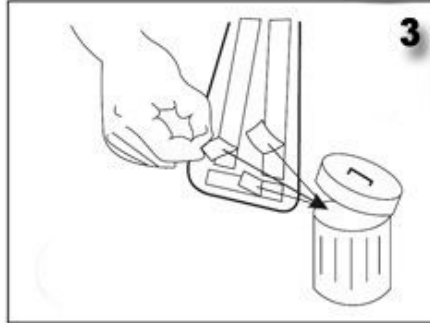
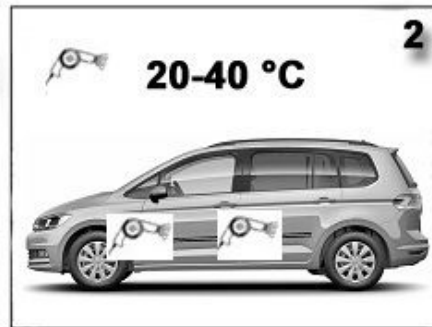


VW Touran 2015 → PU Side Mouldings F-16

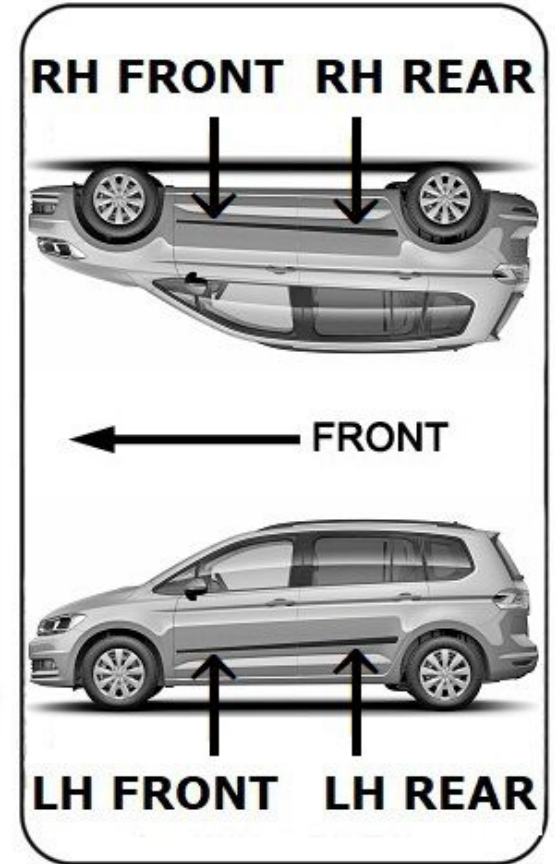

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

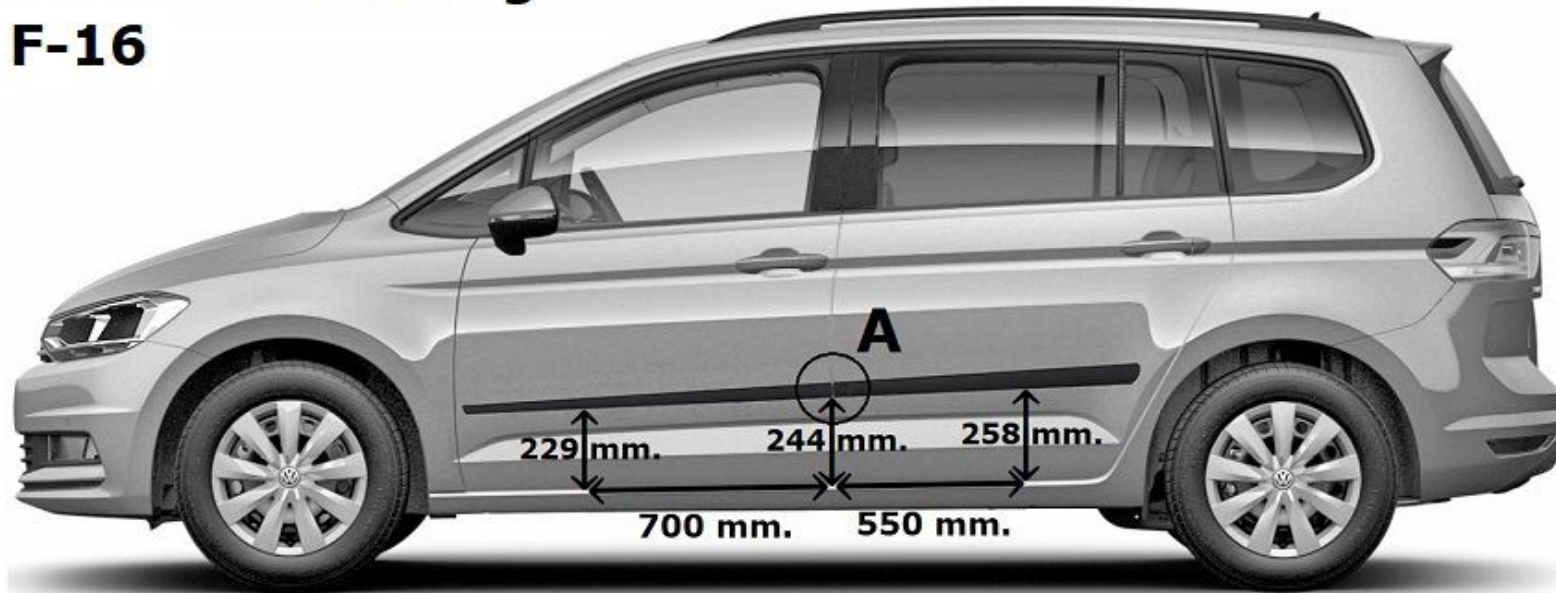