
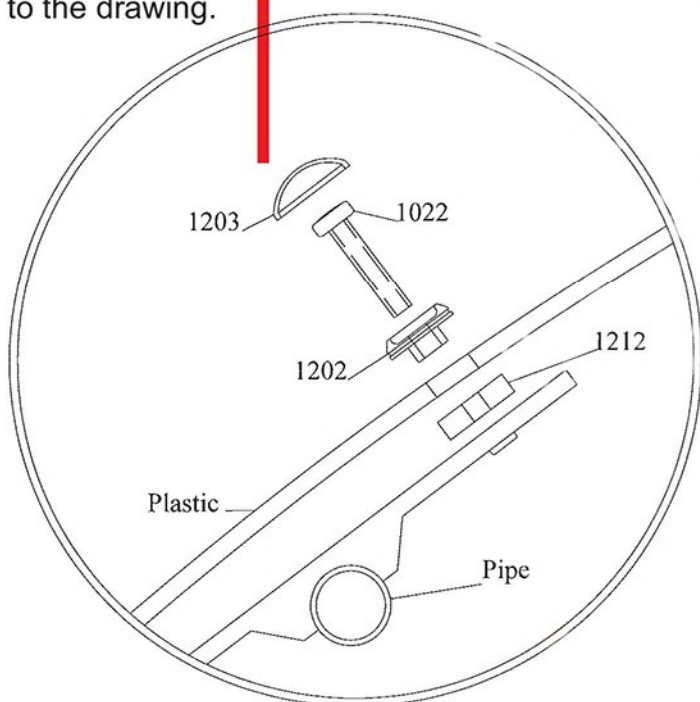
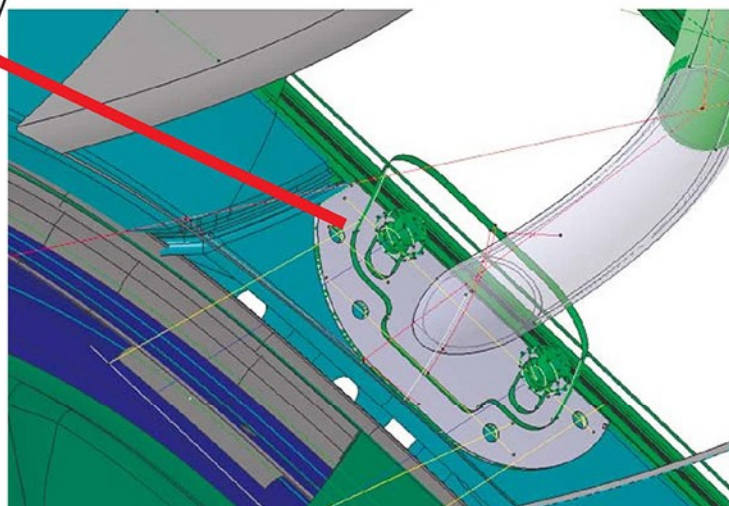


Solskjerm Monteringsanvisning

To mount this product you will need Sikaflex glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

1. Place the side bracket on the A-pilar so that the vertical side follows the innerside of the a-pilar and the top side follows the line on the a-pilar.
2. Mark the hole positions and drill the holes with 4mm bit.
3. Mark the area of the side bracket. Clean the mounting area with sikaflex cleaner and the backside of the bracket.
4. Apply sikaflex primer on the cleaned areas and let it react for 15 minutes.
5. Apply sikaflex on the backside of the side bracket and place it on the a-pilar.
6. Apply some glue into the holes and mount the sidebracket on the pilar with 4,8x19mm screws.
7. Mount the main bracket on the side brackets by using the 8mm washers and nuts.
8. Mount the visor on the main bracket according to the drawing.

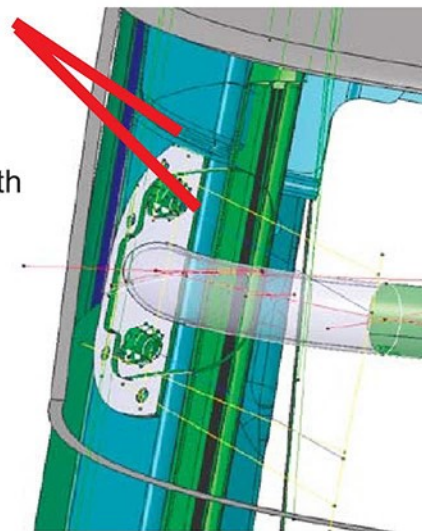

9. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!

ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.